


+3.3V
GND
+3.3V
Reg Sensor Hx

Use one of register board output connectors, or any combination of them, who is comfortable for wire connections.

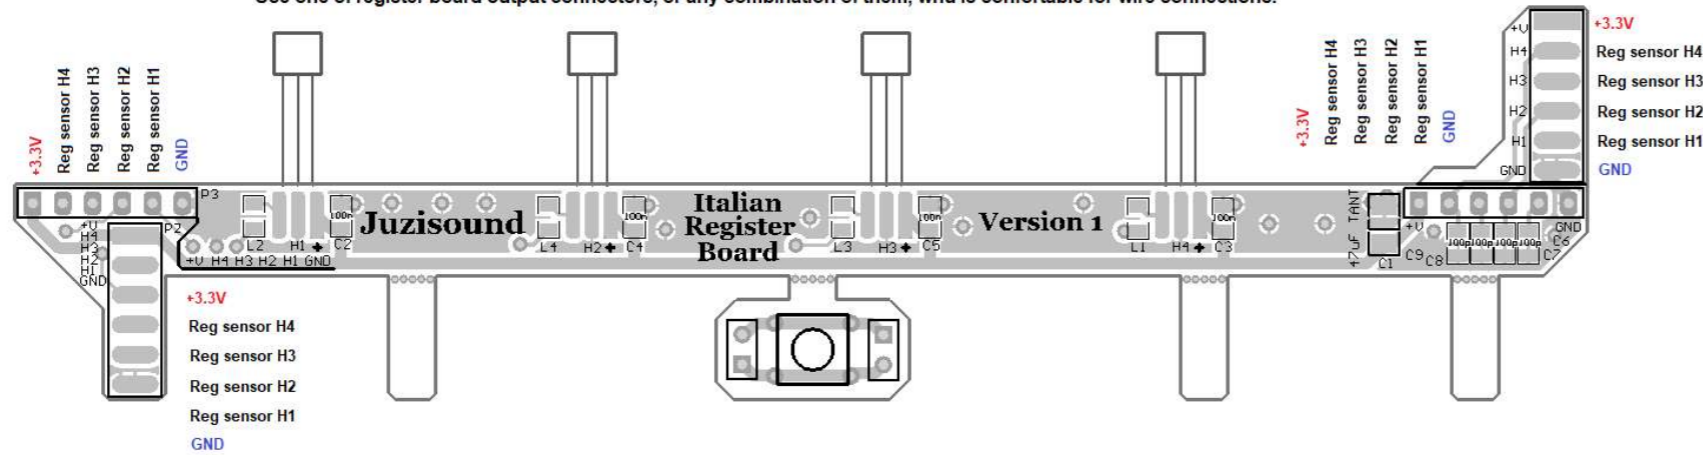

1. Connect one of register board +3.3V pin to 3.3V of P16, or to any +3.3V pin of near unused sensor.
2. Connect one of register board GND pin to GND pin of P16, or to any GND pin of nearest unused sensor.
3. Connect register board sensor outs H1 - H4, to HRegister board sensor outputs H1, H2, H3 and H4, to any unused sensor inputs on sensor board. Use sensor inputs on P16 or any free (unused) register out pin.

Note:
Be sure, another sensors not use the same function 128-131. Only sensors for registers. All unused sensors need to have function 255 / OFF.